



# 4210 Auto start module



 
Agent JO Båtelektriska Amira AB  
Björlandakiles Småbåtshamn  
SE-423 61 Torslanda, SWEDEN



46-(0)31 92 59 17  
46-(0)31 92 59 17 Fax Internet: [www.jobatel.com](http://www.jobatel.com)  
070-692 59 17 Mobil E-mail: [info@jobatel.com](mailto:info@jobatel.com)



Återförs. IMSAB  
Guldringen 1  
SE-426 52 Västra Frölunda, SWEDEN



46-(0)31 29 06 40 © 03.2004 IMSAB  
46-(0)31 29 48 29 Fax Internet: [www.imsab.se](http://www.imsab.se)  
070-76 00 480 Mobil E-mail: [Info@imsab.se](mailto:Info@imsab.se)

# 4210- Auto start module

Manufacture DEEP SEA ELECTRONICS PLC



- **CANBus link to connect to the industry standard SAE J1939 'Eco friendly' engine management systems providing engine protection and instrumentation without requiring additional senders.**
- **Engine diagnostic information negating the need for service equipment, replacing the 'cryptic' diagnostic lamp!**
- **LCD text based display to provide at a glance diagnosis of fault conditions, instrumentation and operating state.**
- **Comprehensive PC configuration and status monitoring using 42xx PC software.**
- **PIN number protected front panel programming of selected trip points and timers, allows field changes to be made to the module settings.**
- **Built in exercise timer.**
- **'Sleep mode' to ensure very low battery power usage when in "Off" mode.**
- **Multiple LCD languages (English, French, Spanish, German etc)**
- **Automatic and Manual operation modes.**
- **Three fully user customisable auxiliary inputs for connection to external fault detection equipment.**
- **Five fully configurable outputs to help produce complex applications.**
- **Integral load switch control capability.**

## DESCRIPTION

**The Model 4210 is an Autostart Control Module.** The module is used to automatically start a generator set upon application of a remote signal or by manual button presses. The module also provides indication of operational status and fault conditions, automatically shutting down the genset and indicating failures by means of an LCD display.

Alterations to the system are made using the 42xx PC configuration software in conjunction with the 810 interface. This interface also provides real time diagnostic facilities.

Selected timers and alarms can be altered by the customer or site engineer from the front panel. The front panel editor can be PIN code protected to prevent unauthorised access.

### Easy push button control

Operation of the module is via pushbutton controls (with security locking facility) mounted on the front panel with STOP/RESET, AUTO, MANUAL and START pushbuttons. The first three pushbuttons feature LED 'selected' indications. Further pushbuttons provide LCD DISPLAY SCROLL, LAMP TEST and MUTE functions.

### Microprocessor control

The module features 16-Bit microprocessor control and a comprehensive list of timers and pre-configured sequences. This allows demanding specifications to be achieved.

The 4210 module provides an LCD display with the following instrumentation displays, accessed via the LCD DISPLAY SCROLL push-buttons :

- Engine Speed RPM.
- Engine Oil Pressure.
- Engine Coolant Temperature.
- Engine Hours Run.
- Auxiliary Charging voltage (where supported by the ECU).
- Plant battery Volts
- Engine ECU diagnostics information via industry standard SAE J1939 interface.

---

Ageljö Båtelektrisaka Amira AB  
Sörlandakiles Småbåtshamn  
SE-423 61 Torslanda, SWEDEN



46-(0)31 92 59 17  
46-(0)31 92 59 17 Fax  
Internet: www.jobatel.com  
070-692 59 17 Mobil E-mail: info@jobatel.com

---

ÅterIMSAB  
Hjaldringen 1  
SE-426 52 Västra Frölunda, SWEDEN

- 2 -



46-(0)31 29 06 40  
46-(0)31 29 48 29 Fax  
070-76 00 480 Mobil

© 03.2004 IMSAB  
Internet: www.imsab.se  
E-mail: Info@imsab.se

## SPECIFICATION

### DC Supply:

8 to 35 V Continuous.

### Cranking Dropouts:

Able to survive 0 V for 50 mS, providing supply was at least 10 V before dropout and supply recovers to 5V.

*This is achieved without the need for internal batteries.*

### Max. Operating Current:


290mA at 12V & 180mA at 24V.

## ORDERING INSTRUCTIONS

4210 – Auto start module

Deep Sea Electronics reserve the right to change specification without notice.

## DIMENSIONS

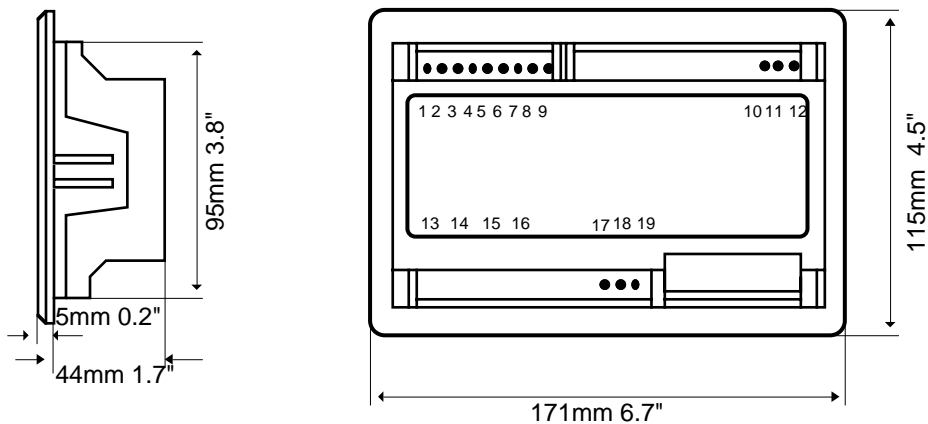

Panel cutout 154mm x 98mm (6.1" x 3.9")

### Typical Standby Current:

190mA at 12V & 110mA at 24V.

### Auxiliary Outputs 1-4:

Solid state outputs -1.2A DC at supply voltage. Switches to battery negative when active.

### Auxiliary Output 5:

16 Amp DC volts-free relay

### Dimensions:

171mm x 115mm x 49mm (63/400 x 41/200 x 200)

### Operating Temperature Range:

-30 to 70°C

### Engine ECU interface:

SAE J1939 CANbus



Agent JO Båtelektrisaka Amira AB  
Björlandakiles Småbåtshamn  
SE-423 61 Torslanda, SWEDEN



46-(0)31 92 59 17  
46-(0)31 92 59 17 Fax Internet: www.jobatel.com  
070-692 59 17 Mobil E-mail: info@jobatel.com




Återförs. IMSAB  
Guldringen 1  
SE-426 52 Västra Frölunda, SWEDEN



46-(0)31 29 06 40 © 03.2004 IMSAB  
46-(0)31 29 48 29 Fax Internet: www.imsab.se  
070-76 00 480 Mobil E-mail: Info@imsab.se

# TYPICAL CONNECTIONS

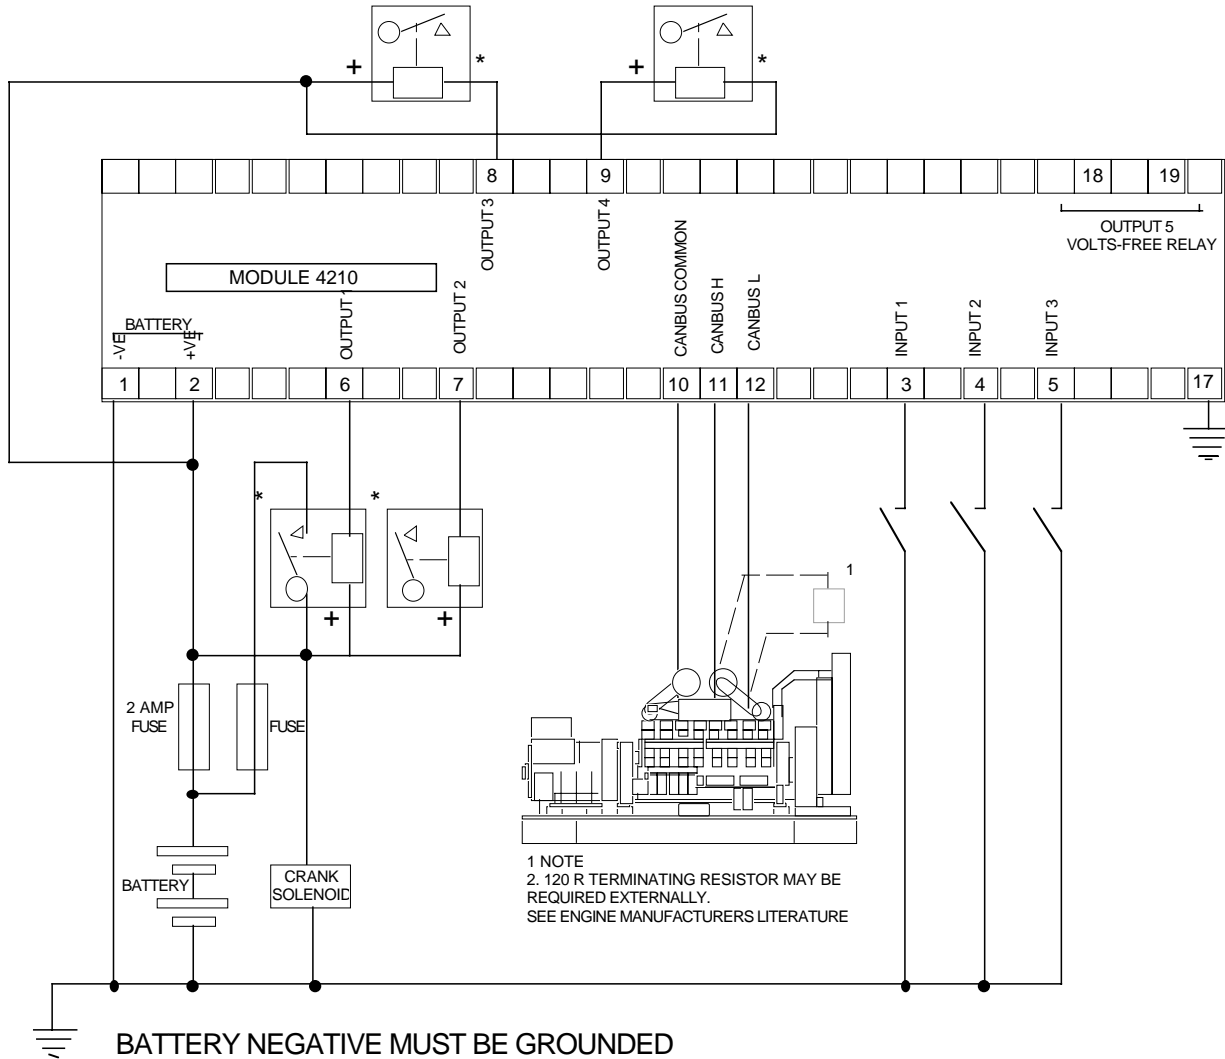

**BATTERY NEGATIVE MUST BE GROUNDING**  
**TERMINALS SUITABLE FOR 22-16 AWG (0.6mm<sup>2</sup> - 1.3mm<sup>2</sup>) FIELD WIRING**  
**TIGHTENING TORQUE = 0.84NM (7lb-in)**  
 \* NOTE. SOME OF THE OUTPUTS ARE SOLID STATE AND ARE NEGATIVE SWITCHING

